

Ethernet Card and installs the PCI 10/100Mbps Fast Ethernet Card with in-build drivers.

To Verify Driver Installation

Click on the “**Device Manager**” tab in System Properties, which you access from the Windows Control Panel. You should see a “**Realtek RTL8139 Family PCI Fast Ethernet NIC**” in Windows® XP/2003 (“**Realtek RTL8139(A) PCI Fast Ethernet Adapter**” in Windows® 2000; “**Realtek RTL8139/810x Family Fast Ethernet NIC**” in Windows® Vista) installed under “**Network adapters**” item.

PCI 10/100 Mbps Fast Ethernet Card

User Manual

Ver. 2.00

**All brand names and trademarks are properties of their
Respective owners.**



Features

- Realtek chipset
- 10Mbps and 100Mbps operation
- Supports 10Mbps and 100Mbps NWay auto-negotiation
- Complies with PCI Revision 2.3
- Supports Full Duplex Flow Control (IEEE 802.3x)
- Half/Full duplex capability
- Support ACPI, PCI power management
- One LED indicate the status of connection
- Crossover Detection & Auto-Correction
- Wake-on-LAN and remote wake-up support (Optional)
- Advanced power saving mode when LAN and wakeup function are not used
- Supports loopback capability
- Support Windows® 2000, XP, Server 2003 and Vista

System Requirements

- Windows® 2000, XP, Server 2003 and Vista
- Pentium or equivalent PC with an available PCI slot

Package Contents

- 1 x PCI 10/100Mbps Fast Ethernet Card
- 1 x User's Manual

Hardware Installation

Follow the instruction given below to install the PCI 10/100Mbps Fast Ethernet Card.

1. Turn your computer off and remove the power plug from the plug socket.
2. Remove the cover from the computer case.
3. Remove the metal cover plate on the rear of a free PCI slot.
4. Insert the card into one free PCI slot and screw it firmly on the bracket side.
5. Place the cover back onto the computer.
6. Insert the plug into plug socket.

Driver Installation

For Windows® 2000/XP/Server 2003/Vista

In Windows® 2000/XP/Server 2003/Vista, when the system is booted up it automatically detected the PCI 10/100Mbps Fast